


## Location of DOT Cylinders

From NFPA 58, Appendix I

Federal, state, and local ordinances and regulations should be observed at all times.

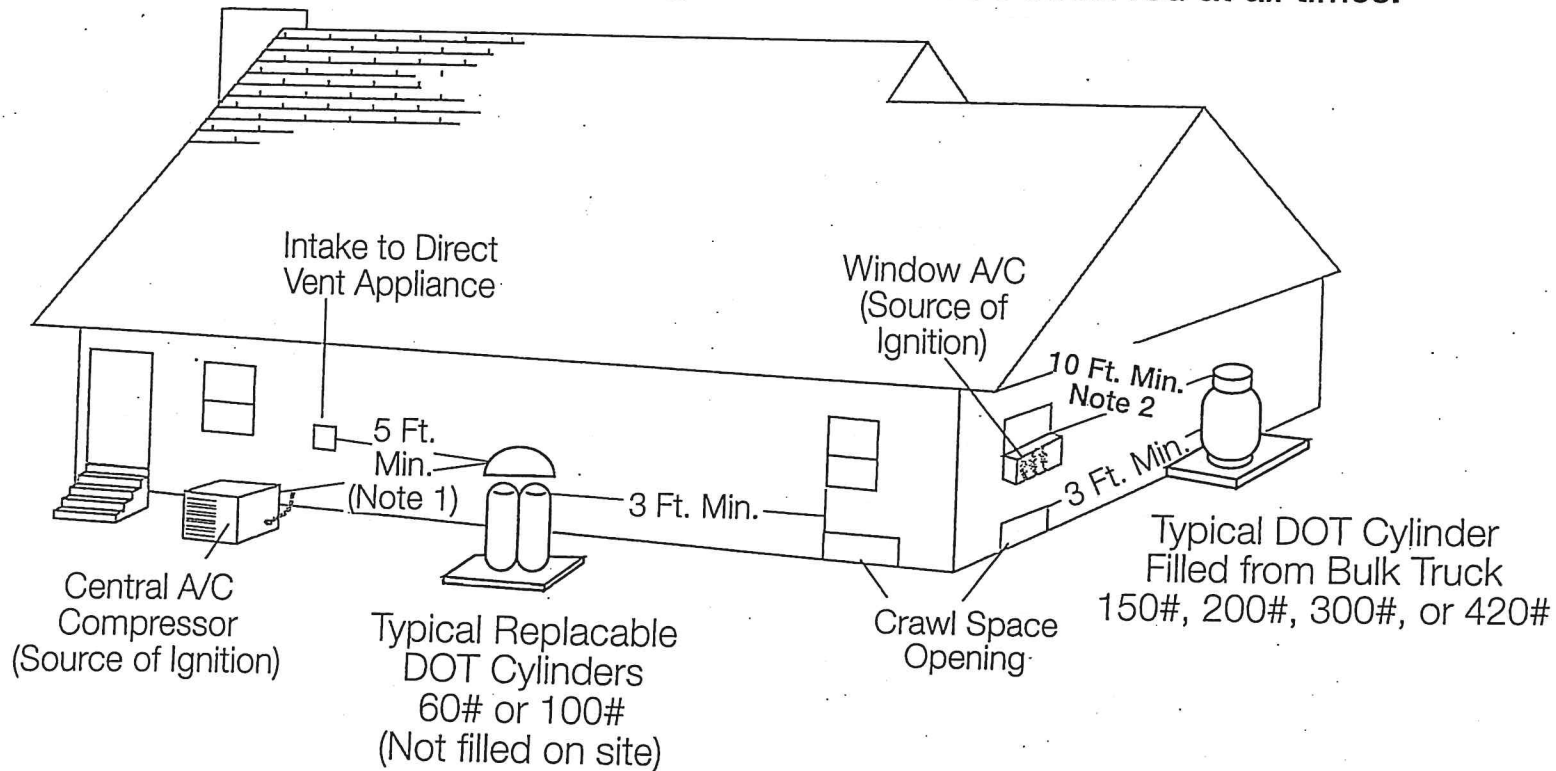

- Notes: 1) 5 foot minimum between relief valve discharge and external source of ignition (air conditioner), direct vent, or mechanical ventilation system. (attic fan).
2. If the DOT cylinder is filled on-site from a bulk truck, the filling connection and vent valve must be at least 10 feet from any external source of ignition, direct vent. or mechanical ventilation system.